



EPR Series

High Precision Electronic Pressure and Vacuum Controllers
Accurate to 0.25% of full scale

How It Works

Pressure is controlled by the use of two solenoid valves. One valve functions as inlet control and acts to allow supply media into the system to increase the controlled pressure. The other solenoid valve acts as the exhaust and will decrease the controlled pressure by venting the system to atmosphere. Both solenoid valves operate proportionally to the current supplied by the EPR's electronic control circuit.

The regulated pressure output is measured by a solid state pressure transducer internal to the EPR. This pressure transducer provides a feedback signal to the EPR's electronic control circuit. The control circuit compares the internal sensor feedback signal to the command signal input. Any difference between the two signals causes the appropriate solenoid valve to open, allowing flow in or out of the system. Accurate pressure is maintained by controlling these two valves. See Fig. 1.

PRECISE CONTROL FROM VACUUM UP TO 3000 PSI

The Equilibar EPR Series is a precision electronically controlled pressure and/or vacuum regulator. The EPR controls pressure or vacuum accurately and with high resolution within a closed volume or in a system with low flow rates. The dual valve technology controls pressure with minimal loss of expensive gases.

The EPR Series may be controlled with an analog or a digital command signal, or it can be quickly commanded using the convenient keypad interface.

NOTE: Equilibar offers intrinsically safe/ATEX-rated instruments, but this brochure is not for those insturments. ATEX-rated instruments have specific requirements for power supply and IP rated enclosures. For information, please <u>contact Equilibar</u>.

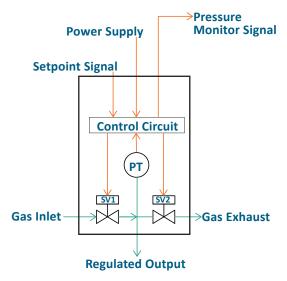


Fig. 1 EPR Diagram


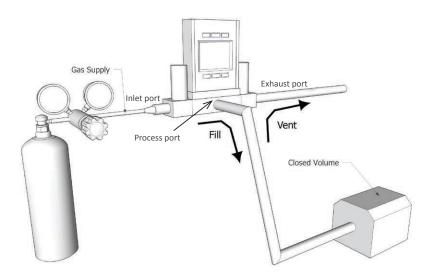



Fig. 2 Typical EPR Plumbing Diagram

Common Applications

CATALYST RESEARCH REACTOR CONTROL

The EPR pressure controller is designed for static to low-flow applications of inert gas such as nitrogen or air. One common application is to provide a high pressure pilot signal for dome-loaded regulators. In the schematic below, an EPR is used to control the output pressure of a catalyst research reactor. Because both the EPR and the Equilibar® back pressure regulator have no significant hysteresis or dead-band, it is possible to precisely control reaction conditions even with highly varying process flow rates.

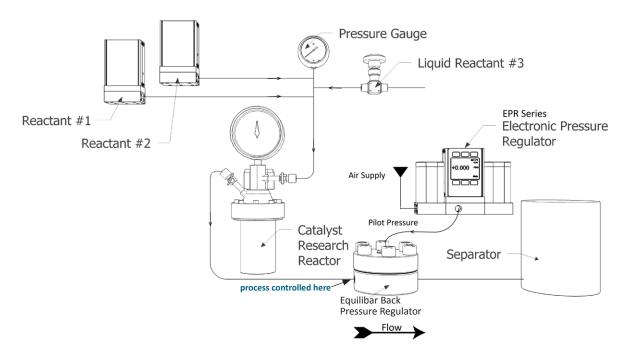

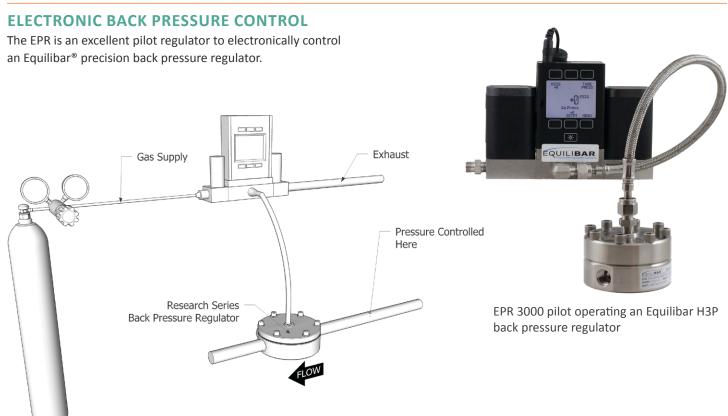

Key Performance Features

- Proportional inlet & outlet valves for maximum stability
- No gas wasted at steady state
- Very high resolution with 0.25% accuracy
- Digital or analog communications
- Direct control from the keypad

General Specifications

PARAMETER	SPECIFICATION	
Maximum Pressure	Models to 30inHg; 150 psig; 500 psig; 1000 psig; 3000 psig	
Maximum Inlet Pressure	115% of maximum calibrated range	
Full scale pressure accuracy >2"H20	± 0.25%	
Maximum Flow	50 SLPM at 3000 PSIG Supply and 1500 PSIG Setpoint	
Repeatability	± 0.08% Full Scale	
Zero Shift and Span Shift	0.02% Full Scale / ºCelsius	
Operating Range / Turndown Ratio	0.5% to 100% Full Scale / 200:1 Turndown	
Excess Pressure	102.4% FS Controllable	
Burst Pressure	3 X Full Scale	
Typical Response Time ¹	100 ms (Adjustable)	
Warm-up Time	< 1 Second	
¹ Volumes, feed pressures, exhaust pressures and line sizing will determine the limits of response times.		

OPERATING CONDITIONS	SPECIFICATION	
Gas Compatibility	Compatible with all non-corrosive gases	
Operating Temperature	-10 to +50 ºCelsius	
Mounting Altitude Sensitivity	None	
Valve Type	Normally Closed	
Ingress Protection	IP40	
Wetted Materials	302 & 303 Stainless Steel, Viton®, Silicone RTV, Brass, 400 Series Stainless Steel, Silicon, Glass.	
Viton [®] is a registered trademark of DuPont.		

COMMUNICATION / POWER	SPECIFICATION	
Monochrome LCD or Color TFT Display with integrated touchpad	Controls Input / Displays Pressure	
Digital Input / Output Signal ¹ Options	RS-232 Serial / RS-485 Serial / ModBus	
Analog Input / Output Signal ² Options	4-20 mA or 0-5 Vdc	
Optional Secondary Analog Input/Output Signal ²	4-20 mA or 0-5 Vdc	
Electrical Connection	8 Pin Mini-DIN	
Supply Voltage	24 - 30 Vdc	
Supply Current	0.250 Amp	
1The Digital Output Signal communicates Proceure		

MECHANICAL SPECIFICATIONS	CHANICAL SPECIFICATIONS MECHANICAL DIMENSIONS	
EPR 30Hg, EPR 150 and EPR 500	4.1"H x 4.8"W x 1.1"D	1/8" NPT Female
EPR 1000 and EPR 3000	4.1"H x 5.9"W x 1.1"D	1/8" NPT Female


²The Analog Output Signal and Optional Secondary Analog Output Signal communicate Pressure


Ordering Information

EXAMPLE PART NUMBER	EPR	1000	E
Your Part Number:	EPR		
		1	2

1	PRESSURE RANGE
30Hg	0 - 30 inHg Vacuum / 760 Torr
150	0 - 150 psig / 10 bar(g)
500	0 - 500 psi / 34.5 bar(g)
1000	0- 1000 psi / 69 bar(g)
3000	0 - 3000 psi / 206 bar(g)
2	COMMAND SIGNAL
blank	4 to 20 mA (standard)
E	0 to 5 Vdc (option)


EPR Series Dimensional Drawings

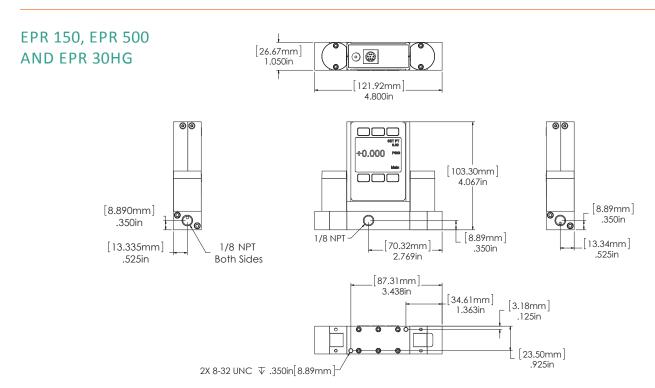

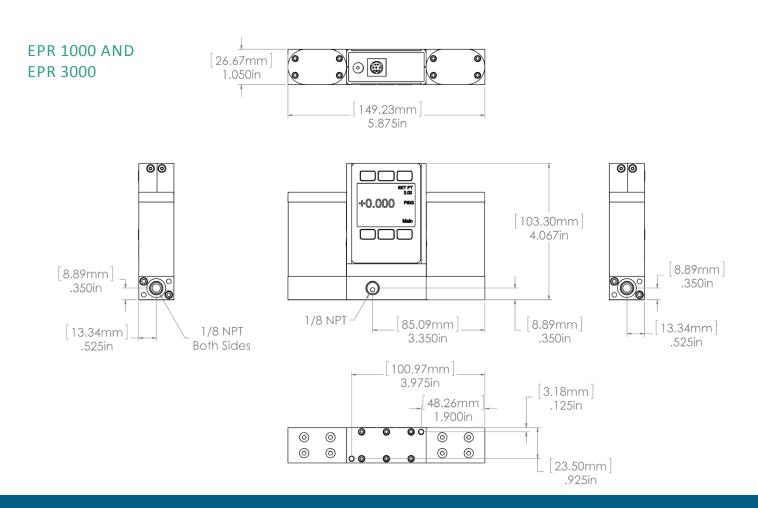



CONVENIENT COMMUNICATION & CONNECTIONS


The EPR Series controller can be quickly commanded using the convenient keypad interface. The EPR can be automated through either the analog interface or by use of a Serial (RS-232 or RS-485) connection. Power supply for the unit (12-30 VDC) can be provided through an included power brick, or provided through the 8 pin DIN connector.

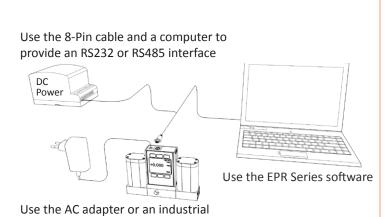

power supply to provide DC power

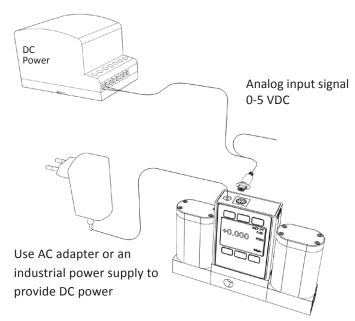

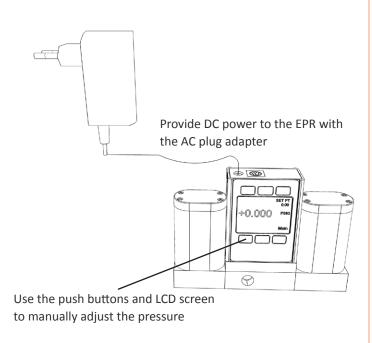

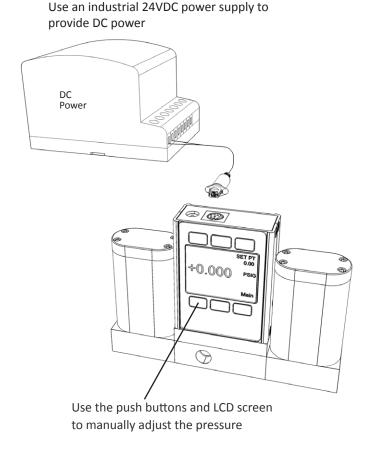

About Equilibar

Equilibar provides innovative and robust pressure control technology for researchers and engineers worldwide. We are proud to design, manufacture, and test our patented back pressure regulators in our factory overlooking the Blue Ridge Mountains near Asheville, NC.

APPLICATION ENGINEERING— WHAT SETS US APART

Unlike mass-market regulator distributors, we focus on working with you, the scientist or engineer with a complex pressure control scenario.

Our application engineers work collaboratively with clients to identify the optimal model, trim, and diaphragm for each application's unique challenges. No matter where you are on the globe, you can stay in close contact with your engineer by email, telephone, videoconferencing, or fax.

After installation, your application engineer will support you with start-up information and fine-tuning as needed.



Equilibar, LLC
320 Rutledge Rd.
Fletcher, North Carolina 28732
United States
Tel: +1-828-650-6590
Fax: +1-801-504-4439
Monday - Friday
8:00 AM - 5:00 PM EST
12:00 - 21:00 GMT
inquiry@equilibar.com



Each application is reviewed by our engineering team to ensure quality performance of our products.



Our engineers offer custom designed solutions for the most difficult pressure control challenges. Feel free to contact us to discuss your situation.

