


Equilibar® HydroStatic Reference Kit

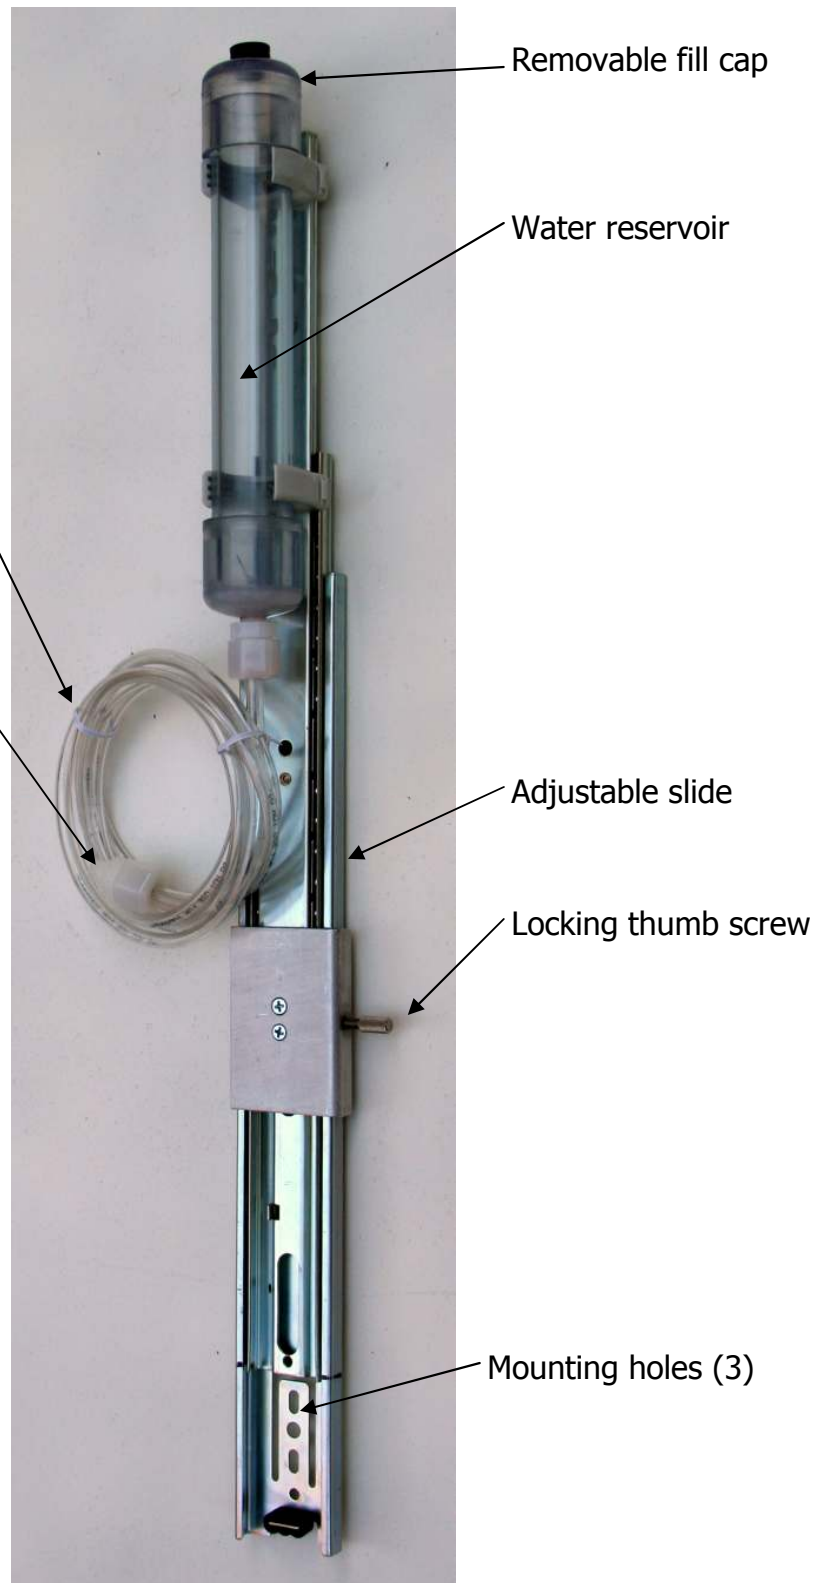

Transparent connection tubing (Cut to length)

1/8" NPT Connection To Equilibar Regulator

The Equilibar® HydroStatic Reference Kit provides reliable setpoint signals in very low pressure applications.

Standard slide extension is 0 - 13.5 inch. Up to 25" available.

Standard tubing length is 6 feet. Others available.

Instructions

Fill reservoir and remove tubing bubbles before connecting to Equilibar.

Pressure signal is equivalent to vertical height difference between water surface and the Equilibar regulator.