



# **QBS Electronic Control Valve**

For Pressures Up To 500 psi

### **About Equilibar QBS**

The Equilibar QBS is an electronic pressure regulator designed to accurately control the pressure of inert gaseous media proportional to an electronic signal. It is primarily used for pressures up to 500psi (35 Bar) and is designed for use in nonhazardous, non-ATEX environments.

The QBS operates using two normally closed solenoid valves, a pressure sensor, and a control circuit. One valve is actuated to allow unregulated supply media to flow in and raise the system pressure. The second valve is actuated to allow working media to vent to atmosphere and lower the pressure in the system. An internal pressure sensor provides feedback to the control circuit. The control circuit compares the pressure sensor feedback to the user supplied electronic command signal and actuates the appropriate solenoid valve until the two signals match.

The QBS is most often used to provide the pilot reference pressure to an Equilibar<sup>®</sup> back pressure regulator. However, the QBS is useful in any application where a relatively small closed volume requires the pressure to be either accurately or remotely controlled.


The QBS series product comes with an electronic monitor output signal. This monitor output is an electrical signal originating from the internal pressure transducer used in the control circuit. The signal allows the system pressure to be remotely monitored and also provides a useful signal for data acquisition needs. The output of this signal can be configured to either 0- 10Vdc or 4-20mA.

The QBS is built using a rugged stainless steel manifold and is contained within a protective NEMA4/IP65 enclosure.

The QBS2 is similar to the QBS1 but uses a double loop control scheme. In addition to the internal pressure transducer, the QBS2 also receives a 0-10Vdc feedback signal from an external pressure sensing device. The external pressure signal functions as the primary feedback and is compared directly to the command signal.

A difference between the two comparisons causes one of the two solenoid valves to open allowing flow in or out of the system as required. The QBS2 second loop is used in a narrow range of applications and is especially useful when pilot operating a pressure reducing regulator (also known as a volume booster). This allows the QBS2 to compensate for any mechanical errors or hysteresis of the volume booster.

An Equilibar DSY or DSTY will work as a second loop feedback to the QBS2. The QBS2 monitor signal mimics the external pressure sensor signal.

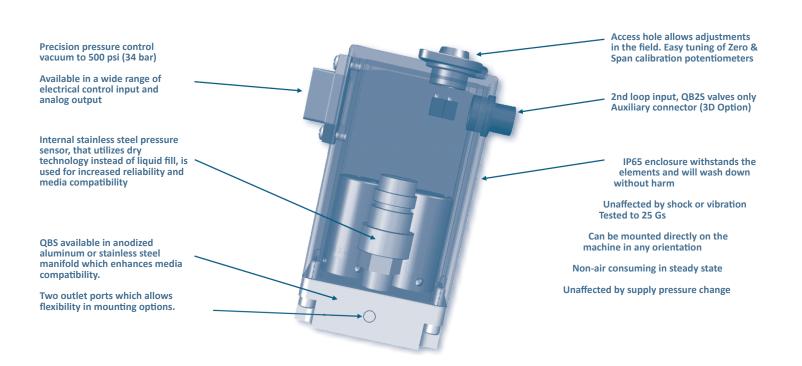


### **QB** General Specifications

ELECTRICAL							
SUPPLY VOLTAGE	15 to 24 VDC						
SUPPLY CURRENT	250 mADC						
COMMAND VDC	0 to 10 VDC						
COMMAND (CURRENT option)	4 to 20 mADC Differential						
MONITOR VDC	0 to 10 VDC						
MONITOR (CURRENT option)	4 to 20 mADC						
COMMAND SIGNAL IMPEDANCE	Voltage=10 KΩ Current=100 Ω						

PNEUMATIC						
INLET PRESSURE	Full Vac - 550 psig					
CALIBRATED PRESSURE RANGE	Full Vac up to 500 psig					
FILTRATION REQUIRED	40 Micron					
ACCURACY (PRESSURE)	±0.5% F.S.					
HYSTERESIS	±0.2% F.S.					
REPEATABILITY	±0.05% F.S.					
PORT SIZE	1/8" NPT Female					
CRITICAL VOLUME	1 in <sup>3</sup>					

WETTED PARTS	Fluorocarbon, Brass, Nickel-Plated Brass, Silicon and Aluminum, Stainless Steel
OPERATING TEMP	32°F to 158°F
PROTECTION	NEMA 4/IP65
WEIGHT	1 lbs.   1.4 lbs. (SS)
ELECTRICAL CONNECTOR	6-pin Hirschman

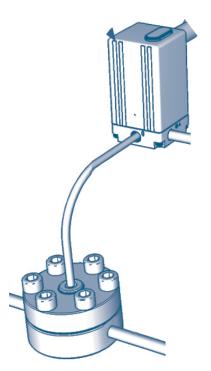


The QBS is shown mounted as a pilot regulator to an Equilibar<sup>®</sup> precision back pressure regulator



\*Not intended for hazardous/explosive environments. \*Meant for use with air or inert gases only.

### **Performance Specifications**

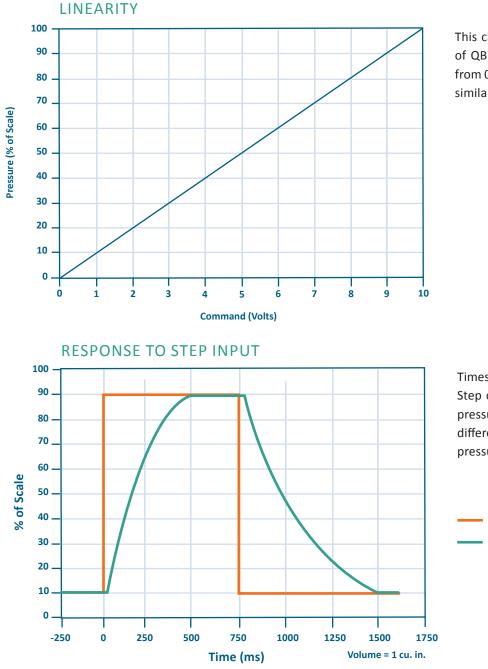

This chart shows the linear characteristics of QB products when given a ramp signal from 0 to 10 volts. Characteristics would be similar for 4 to 20 mA units.


Times for QB to fill/exhaust a closed chamber. Step command signal is superimposed over pressure trace. Time is determined by the difference between command signal and pressure achieved.

> Command Pressure

#### **GENERAL INLET PRESSURE RATING**

FOR VALVE THAT IS ORDERED WITH MAXIMUM CALIBRATED PRESSURE OF:	MAXIMUM INLET PRESSURE IS:
up to 300 psig (20.7 bar)	330 psig (22.8 bar)
301 to 500 psig (20.8 to 34 bar)	550 psig (37.9 bar)

### **Dimensional Drawing & Accessories**

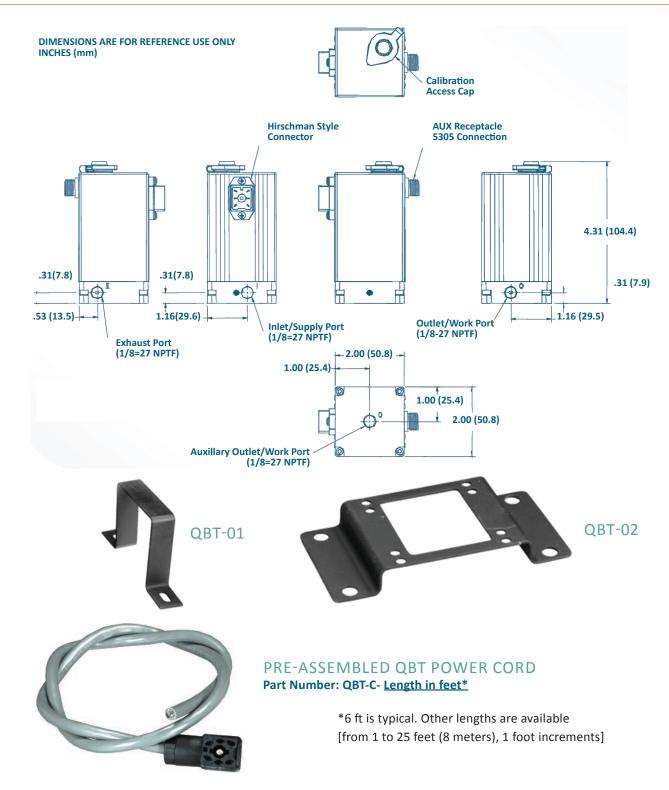

#### WARRANTY

Equilibar products are warranted to the original purchaser only against defects in material or workmanship for one (1) year from the date of manufacture. The extent of Equilibar's liability under this warranty is limited to repair or replacement of the defective unit at Equilibar's option. Equilibar, LLC shall have no liability under this warranty where improper installation or filtration occurred.

All specifications are subject to change without notice. THIS WARRANTY IS GIVEN IN LIEU OF, AND BUYER HEREBY EXPRESSLY WAIVES, WARRANTIES OR LIABILITIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING WITHOUT LIMITATION ANY OBLIGATION OF Equilibar, LLC WITH REGARD TO CONSEQUENTIAL DAMAGES, WARRANTIES OF MERCHANTABILITY, DESCRIPTION, AND FITNESS FOR A PARTICULAR PURPOSE.

WARNING: Installation and use of this product should be under the supervision and control of properly qualified personnel in order to avoid the risk of injury or death.


# **Application Highlights**


### OPEN LOOP ELECTRONIC BACK PRESSURE CONTROL WITH A QB1S

A common application for the QBS is to pilot operate an Equilibar<sup>®</sup> Back Pressure Regulator (BPR).

Equilibar<sup>®</sup> back pressure regulators function with a 1:1 inlet pressure to pilot reference pressure ratio, so supplying 1 unit pressure to the pilot reference port yields 1 unit pressure on the inlet of the Equilibar<sup>®</sup> BPR.

Using the QBS as a pilot regulator for an Equilibar<sup>®</sup> BPR creates a precision electronic back pressure control loop as shown below. The frictionless Equilibar design allows the back pressure control to make use of the high resolution of the QBS.

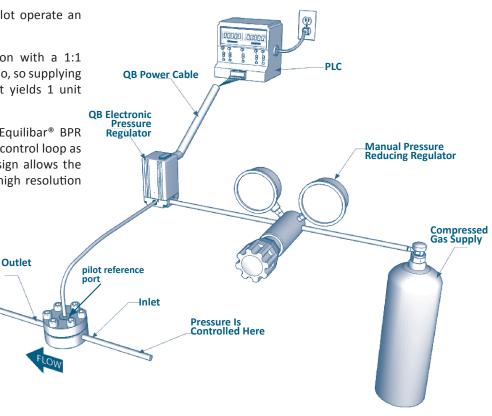

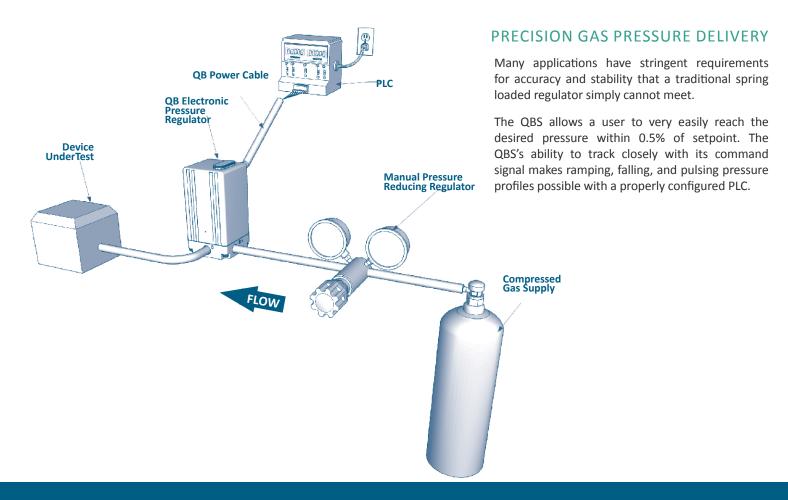

## **QBS Ordering Information**

EXAMPLE PART NUMBER	QB	2	SS	E	E	z	Р	0	Р	500	PSI	G
Your Part Number:	QB											
		1	2	3	4	5	6	7	8	9	10	11

1	ТҮРЕ	7	ZERO OFFSET PRES	SURE				
1	Single Loop		Typical is 0* - If Grea					
2	Double Loop (External Feedback)		Pressure (#9 below) Please Consult Factory. *If Z for ZERO OFFSET (#6), please leave					
				11 2 101	ZERO OTTSET (#0), please leave blank			
2	MANIFOLD MATERIAL	8	FULL SCALE PRESSU					
SS	303 Stainless Steel	P						
		•	100% Tressure Enus	Above Atmo	sphere			
3	THREAD TYPE	9	FULL SCALE PRESSU	JRE				
N	NPT (Standard)		Must be less than or equal to 500 psig					
Р	BSPP	*For maximum pressures less than higher performance at lower cost						
4	INPUT SIGNAL RANGE	10	PRESSURE UNIT					
E	0 to 10 Vdc (Single Ended)	PS	PSI	ІН	Inches Hg			
I	4 to 20 mADC (Differential)	MB	Millibars	IW	Inches H <sub>2</sub> 0			
К	0 to 5 Vdc	BR	Bar	MW	mm H <sub>2</sub> 0			
v	1 to 5 Vdc*	KP	Kilopascal	KG	Kilograms/cm <sup>2</sup>			
	*Requires V for MONITOR SIGNAL RANGE	MP	Megapascal	TR	Torr*			
5	MONITOR SIGNAL RANGE	МН	mm Hg	CW	Centimeters H <sub>2</sub> 0			
Х	No Monitor			*Requir	es A for PRESSURE UNIT OF MEASURE			
E	0 to 10 Vdc							
K	0 to 5 Vdc*	11	PRESSURE UNIT OF	MEASURE				
V	1 to 5 Vdc **	Α	Absolute Pressure					
C	4 to 20 mADC (Sinking)	G	Gage Pressure					
S	4 to 20 mADC (Sourcing)		Please		ctory For More Options ation Assistance			
	*Requires E, I, or K for INPUT SIGNAL RANGE							
6	** Requires V for INPUT SIGNAL RANGE ZERO OFFSET		RECO	MMENDED	ACCESSORIES			
N N	0% Pressure Starts Below Atmosphere							
IN	over ressure starts below Atmosphere		<b>QBT-C-6</b> 6 ft. Power Cable					

- N 0% Pressure Starts Below Atmosphere P 0% Pressure Starts Above Atmosphere
- **Z** 0% Pressure Starts at Zero (Typical)

### TYPICALLY IN STOCK PARTS (most often available for faster shipment)

PART NUMBER	ТҮРЕ	MANIFOLD MATERIAL	CONNECTION	INPUT SIGNAL RANGE	MONITOR SIGNAL RANGE	FULL SCALE PRESSURE	AVAILABILITY			
QB1SSNEEZP300PSG	Single Loop	Stainless Steel	1/8" NPT	0-10 Vdc	0-10 Vdc	0-300 psig	1-2 Days			
QB1SSNEEZP500PSG	Single Loop	Stainless Steel	1/8" NPT	0-10 Vdc	0-10 Vdc	0-500 psig	1-2 Days			

#### EQUILIBAR 7

QBT-01 Wrap-Around Bracket

QBT-02 Foot-Mount Bracket (Installed)\*

# About Equilibar

Equilibar provides innovative and robust pressure control technology for researchers and engineers worldwide. We are proud to design, manufacture and test our patented back pressure regulators in our factory overlooking the Blue Ridge Mountains near Asheville, NC.

#### APPLICATION ENGINEERING-WHAT SETS US APART

Unlike mass-market regulator distributors, we focus on working with you, the scientist or engineer with a complex pressure control scenario.

Our application engineers work collaboratively with clients to identify the optimal model, trim, and diaphragm for each application's unique challenges. No matter where you are on the globe, you can stay in close contact with your engineer by email, telephone, videoconferencing or fax.


After installation, your application engineer will support you with start-up information and fine-tuning as needed.



Equilibar, LLC 320 Rutledge Rd. Fletcher, North Carolina 28732 United States Tel: +1-828-650-6590 Fax: +1-801-504-4439 Monday - Friday 8:00 AM - 5:00 PM EST 12:00 - 21:00 GMT inquiry@equilibar.com



Each application is reviewed by our engineering team to ensure quality performance of our products.

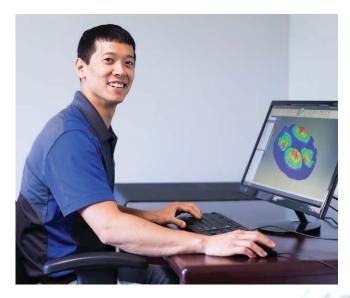

Our engineers offer custom designed solutions for the most difficult pressure control challenges. Feel free to contact us to discuss your situation.



Made in the USA

Equilibar's quality system is **ISO 9001:2015** certified.